 


The BOUNCER has three parts--the bouncer, the blower(s) and the stakes. Choose at set-up area that is approximately 25 feet by 25 feet. (CAUTION: Set-up on a grassy surface only! No cement or rocks. The area must also be free of hanging tree limbs and power lines.) Place the BOUNCER at the rear of your set-up area and unroll it flat on the ground, using the corner loops.





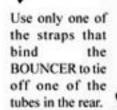

Slip the other tube in the rear of the BOUNCER snugly around the blower outlet and secure it with the attached strap as well as the other binder strap.



Plug each blower into a 115 volt electrical outlet. Make sure the outlet has either a SLO-BLO 20 AMP fuse or 30 AMP fuse circuit. The blower should be the only thing plugged into that circuit. If two blowers are required they must be on seperate circuits. Do not use any other extension cords besides the one 50 foot that is already attached to your blower.





THE BOUNCER MUST BE ANCHORED!!!

Inflation takes about five minutes. The blower runs continuously while the BOUNCER is in use. Once inflated, the BOUNCER can be repositioned then anchored into final position.

The BOUNCER must be anchored on all four sides! Wrap the rope from each side around a stake and drive it into the ground at a 45° angle towards the unit. The stake should be within 12 inches from the unit to prevent tripping. To test the anchor, pull up with a firm lifting force to assure that it is secure.





